

ANALOGUE EARTH RESISTANCE TESTER

- Capable of measuring earth voltage.
- 2mA measuring current permits the testing of earth resistance without tripping eath leakage current breakers in the circuit under test.
- In addition to faciliating for precision measurement, test leads for simplified two-wire measuring system also are supplied as standard accessories.
- Battery operated.
- Battery life indicator.
- Designed to meet IEC / EN 61010-1 EN 61326-1 safety standard.
- Calibration performed with supplied test leads.

Earth Resistance measurement ranges: $0-12\Omega$, $0-120\Omega$, $0-120\Omega$






STANDARD ELECTRIC WORKS CO., LTD. www.sew.com.tw

CE


Model 1105 ER

+ Instrument Layout

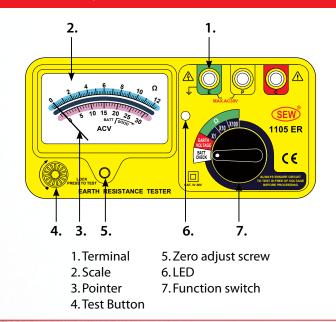


+ Measuring methods


Earth Voltage Check

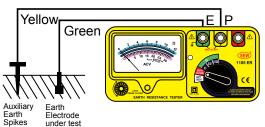

Earth resistance measurement

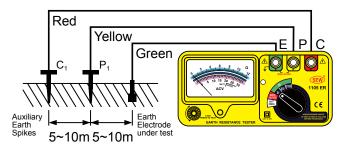

Simplified earth resistance measurement

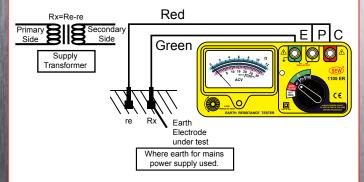

STANDARD ELECTRIC WORKS CO., LTD. www.sew.com.tw ANALOGUE EARTH SEW RESISTANCE TESTER FEATURES

- Capable of measuring earth voltage.
- 2mA measuring current permits the testing of earth resistance without tripping eath leakage current breakers in the circuit under test.
- In addition to faciliating for precision measurement, test leads for simplified two-wire measuring system also are supplied as standard accessories.
- Battery operated.
- · Battery life indicator.
- Designed to meet IEC / EN 61010-1 EN 61326-1 safety standard.
- Calibration performed with supplied test leads.

SPECIFICATIONS

Measuring Ranges	Earth Resistance: $0 \sim 12\Omega / 0 \sim 120\Omega / 0 \sim 1200\Omega$ Earth Resistivity: 0-30V ac (40-500Hz)
Accuracy	Earth Resistance: ±3% of full scale Earth Voltage: ±2.5% of full scale
Measurment System	Earth resistance by constant current inverter(Sauare Signal) 820Hz approx. 2mA
Power Source	1.5V (AA) x 8 or equivalent
Dimensions	175(L) x 85(W) x 75(D)mm
Weight	Approx. 600g (battery included)
Accessories	Test leads (AL-36: red-15m, yellow- 10m, green-5m) Simplified measurement probe. (AL-33) Auxiliary earth spikes Shoulder belt Instruction manual Batteries

Model

5F., NO.105, Jhongcheng Rd., Tucheng Dist., New Taipei City 23674, Taiwan (R.O.C.) TEL: 886-2-22681528 FAX: 886-2-22681529 ε mail: sales@saw.com.tw